


Standard configuration = RS485.  
 To add RC termination, install "Term" jumper.  
 For RS422:  
 Remove jumper that connects XMIT+ to RCV+  
 Remove jumper that connects XMIT- to RCV-

Title <b>Serial Drivers &amp; Field Header</b>			
Project UART Module			
Size: A	Designer Michael Dorman	Rev: 3	
File: Serial_Drivers.Sch			
Sheet 2 of 2	Date: 9-Apr-2013	02:57:08	