



Standard configuration = RS485.
 To add RC termination, install "Term" jumper.
 For RS422:
 Remove jumper that connects XMIT+ to RCV+.
 Remove jumper that connects XMIT- to RCV-.

Title		Serial Drivers & Field Header	
Project	UART Module	Designer	Michael Dorman
Size	A	Rev	2
File	Serial_Drivers.Sch	Date	20-Dec-2002 12:32:36
Sheet	2 of 2	Mosaic Industries	